


# Measure Your Space

Accurate measurements are essential to your kitchen remodel. Before any planning can begin, you will meet with a designer to discuss and review your project. Some basic measurements of your space will enhance your first meeting, and help your designer offer you a more accurate budget.

The drawing below shows a view of what a floor plan could look like. More information will always be beneficial, but the basics would be:

- Walls
- Windows
- Doorways
- Ceiling Heights.

*A Norm Tessier Cabinets, Inc. Designer or Representative will take FINAL measurements of your space upon entering a design retainer contract or remodel contract with Norm Tessier Cabinets, Inc. Your measurements will only be used for estimating, budgeting and consultation purposes only.*

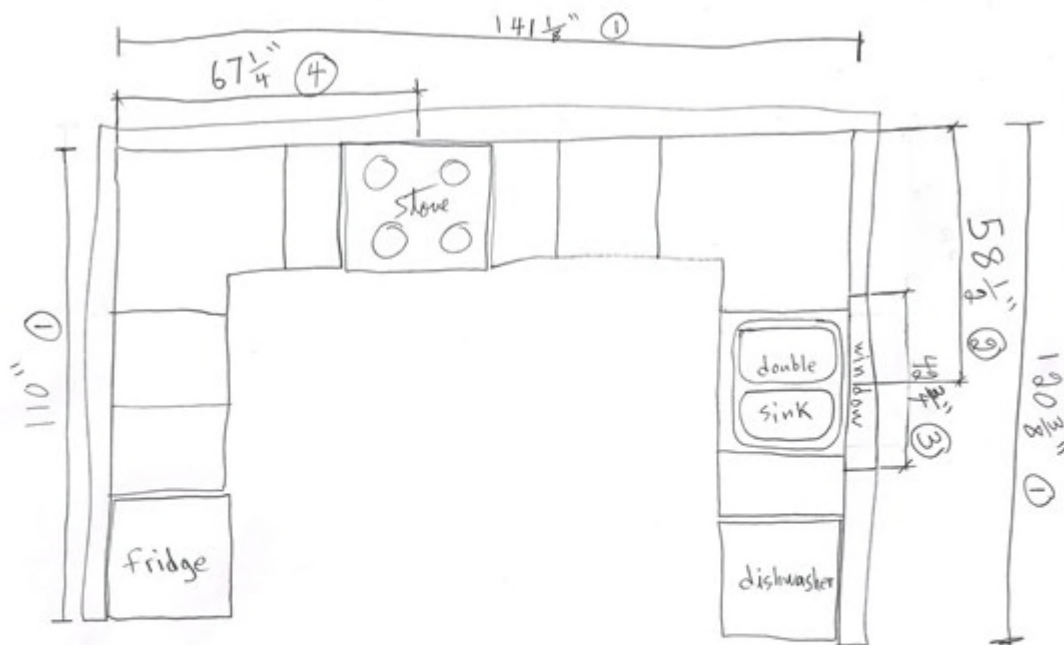

- ① Length of each wall
- ② measure from the wall to the center of the window
- ③ measure the size of the window (inside measurement) we will add casing size after
- ④ measure from the wall to the center of the stove and if the above fan unit is ducted then we would need the measurement to the center of the unit